


# How to connect 2 Relay boxes Commercial

Both sauna heaters must be installed in the same sauna room!

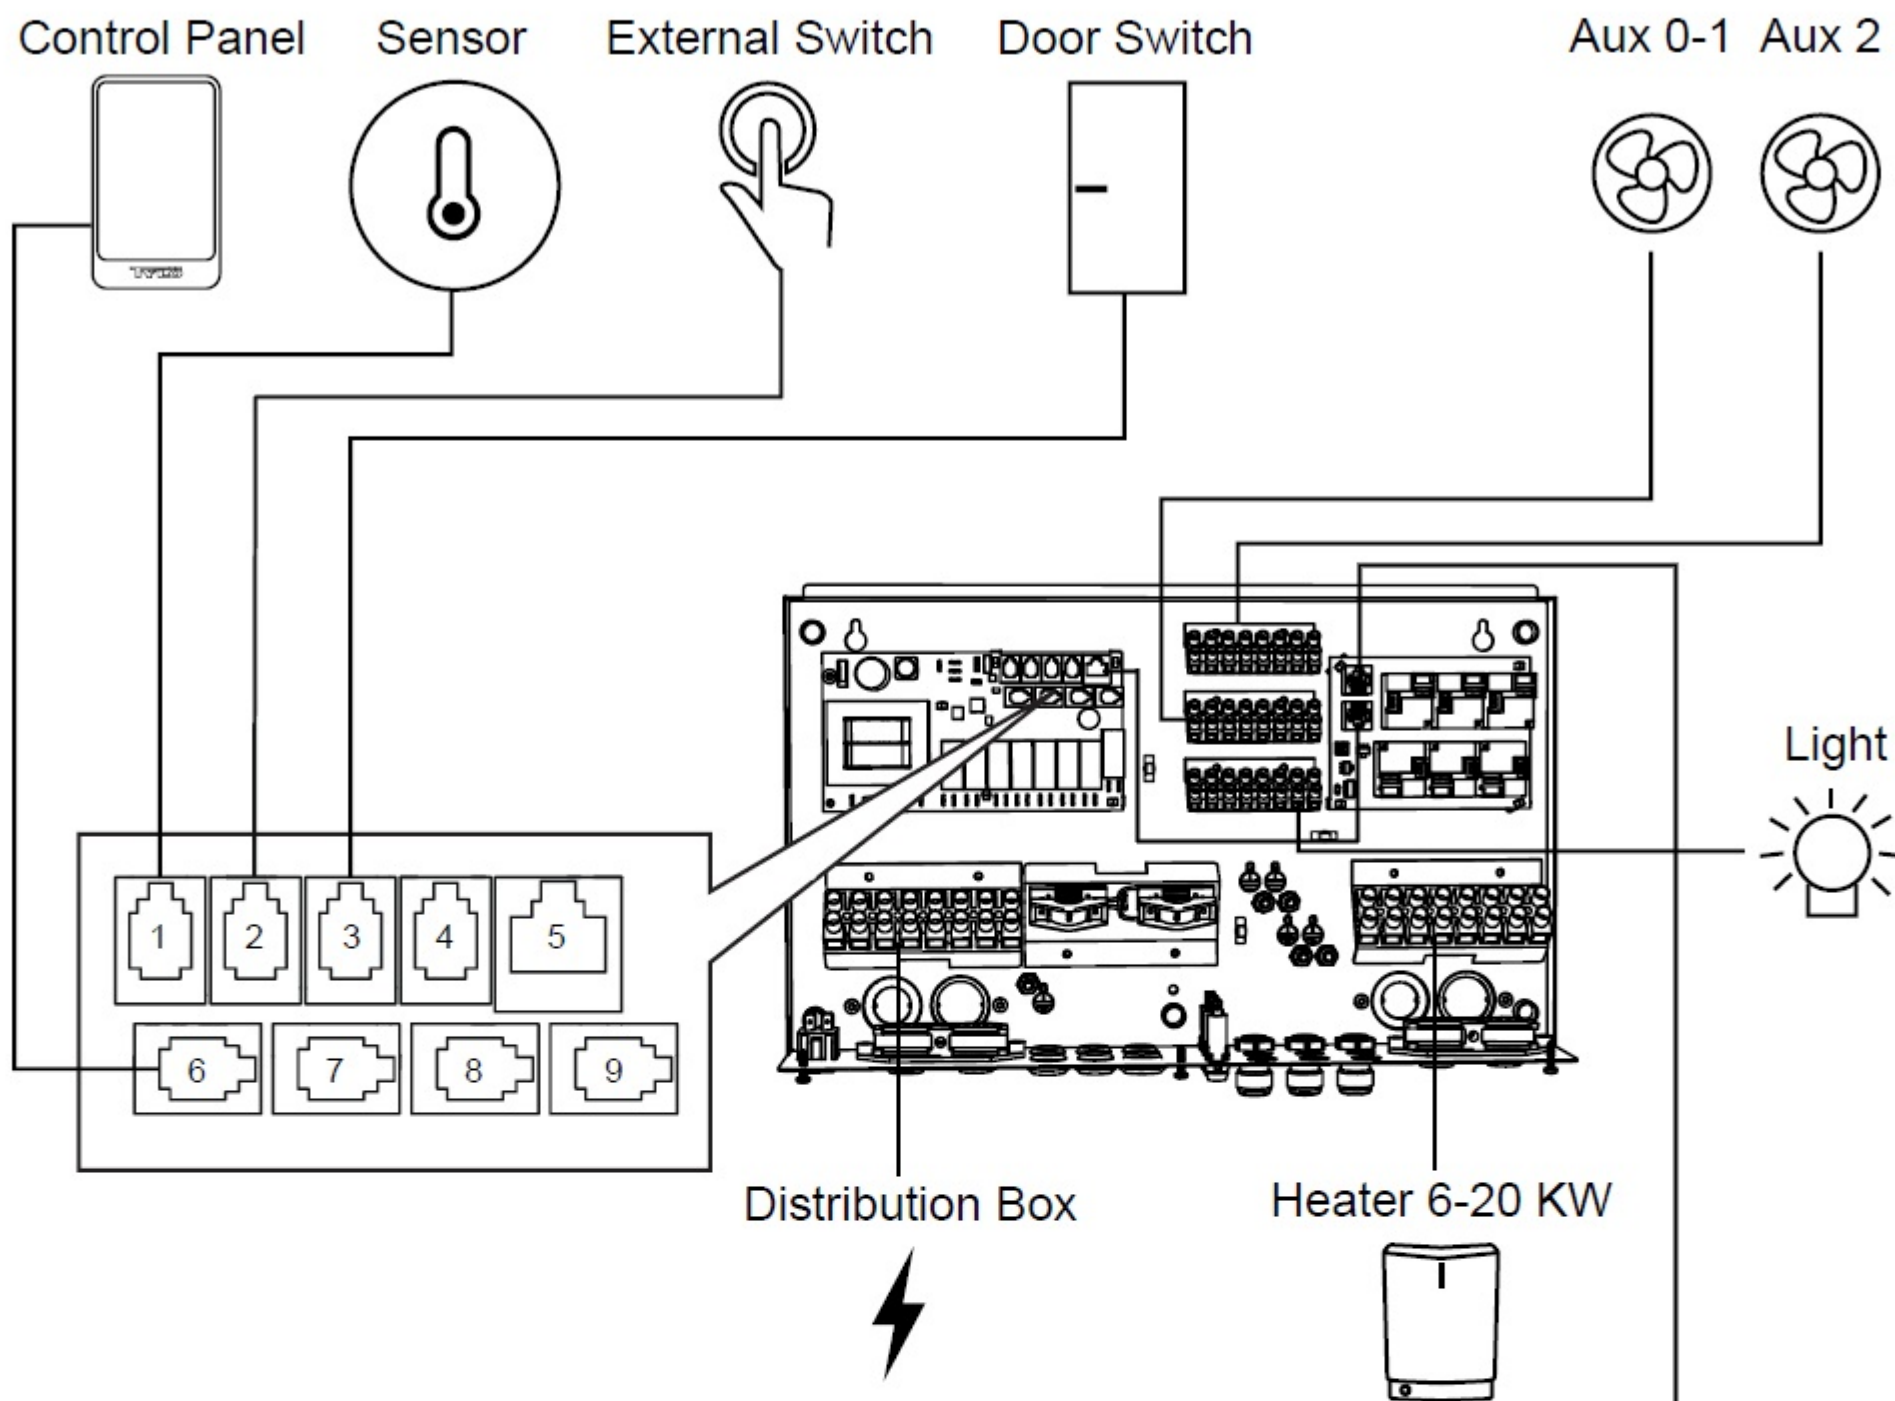

Connect the two relayboxes by a RJ45 from "OUT" connection on addon card in primary to IN connection on addon card in secondary relaybox. DIP switch does not need to be changed in any of the relay boxes

Disconnect RJ45 cable between addon card and main card in secondary relaybox

